

VARISCITE LTD.

VAR-EXT-CB402 Quick Start Guide

© 2013 Variscite Ltd.

All Rights Reserved. No part of this document may be photocopied, reproduced, stored in a retrieval system, or transmitted, in any form or by any means whether, electronic, Mechanical, or otherwise without the prior written permission of Variscite Ltd. No warranty of accuracy is given concerning the contents of the information contained in this publication. To the extent permitted by law no liability (including liability to any person by reason of negligence) will be accepted by Variscite Ltd., its subsidiaries or employees for any direct or indirect loss or damage caused by omissions from or inaccuracies in this document.

Variscite Ltd. reserves the right to change details in this publication without notice. Product and company names herein may be the trademarks of their respective owners.

Document Revision History

Revision	Date	Notes
0.9	18/11/2013	Initial
1.0	24/11/2013	Usage section added
1.1	13/01/2013	Digital microphone not assembled on boars

Table of Contents

Document Revision History	3
Table of Contents	4
1 Introduction	5
2 Package content	6
3 Pin out of the VAR-EXT-CB402 module	7
4 Mechanical view	8
5 Usage of VAR-EXT-CB402 module.....	9
5.1 Viewing camera on Android.....	9
5.2 Viewing camera on Linux	11
6 Legal Notice	13
7 Warranty Terms	14
8 Contact Information.....	15

1 Introduction

This guide provides initial information about how to use the VAR-EXT-CB402 add-on module on the VAR-DVK-MX6 development kit.

2 Package content

The VAR-EXT-CB402 kit contains the following items:

- VAR-EXT-CB402 Add-on module with the following components assembled
 - 5M pixel Omnivision [OV5640](#) camera module.


3 Pin out of the VAR-EXT-CB402 module

VAR-EXT-CB402 uses standard Mini PCI connector with the following pin out.

Pin #	Name	Function
A1	PWR_EN	Power Enable signal for OV5640 Camera
A2	GND	Ground
A3	MIPI_CSI-2_A_DY3 (neg)	NC (OV5640 has only one clock and two data lanes)
A4	MIPI_CSI-2_A_DX3 (pos)	NC (OV5640 has only one clock and two data lanes)
A5	GND	Ground
A6	MIPI_CSI-2_A_DX2 (pos)	NC (OV5640 has only one clock and two data lanes)
A7	MIPI_CSI-2_A_DY2 (neg)	NC (OV5640 has only one clock and two data lanes)
A8	GND	Ground
A9	MIPI_CSI-2_A_DY1 (neg)	OV5640 Data 1 lane negative
A10	MIPI_CSI-2_A_DX1 (pos)	OV5640 Data 1 lane positive
A11	I2C_B_SDA	Not used
A12	I2C_B_SCL	Not used
A13	MIPI_CSI-2_A_CLKX (pos)	OV5640 Clock lane positive
A14	MIPI_CSI-2_A_CLKY (neg)	OV5640 Clock lane negative
A15	GND	Ground
A16	MIPI_CSI-2_A_DX0 (pos)	OV5640 Data 0 lane positive
A17	MIPI_CSI-2_A_DY0 (neg)	OV5640 Data 0 lane negative
A18	GND	Ground
B1	NC1	NC
B2	NC2	NC
B3	NC3	NC
B4	NC4	NC
B5	NC5	NC
B6	NC6	NC
B7	NC7	NC
B8	DMIC_DATA	Digital microphone Data Lane
B9	DMIC_CLK	Digital Microphone Clock Lane
B10	3VCC	3.3V power supply input
B11	GND	Ground
B12	I2C_A_SCL	I2C Clock - Camera & Autofocus Control I2C Bus
B13	I2C_A_SDA	I2C Data - Camera & Autofocus Control I2C Bus
B14	VIO	VIO (3.3V) Reference voltage
B15	NC8	NC
B16	MIPI_CSI-2_A_PDWN	OV5640 Camera Power down
B17	MIPI_CSI-2_CLK_TTL	OV5640 Camera Clock Input (single ended)
B18	GND	Ground

Table 3 - 1 PCI Express Connector

4 Mechanical view

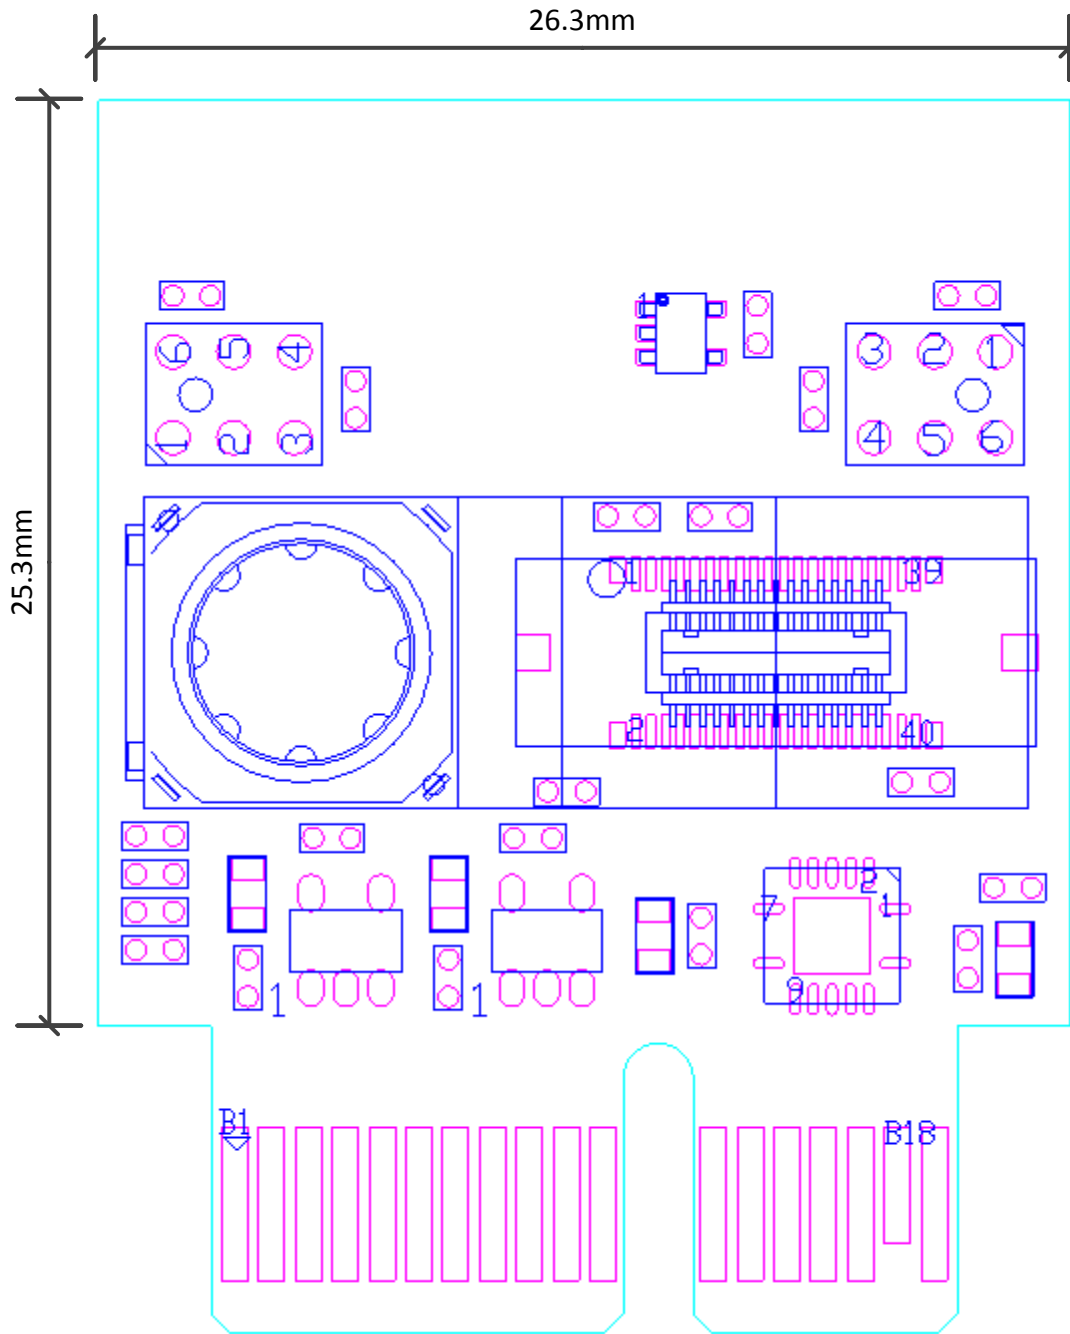


5 Usage of VAR-EXT-CB402 module


Variscite supplies a driver for various Operation Systems: Android Jelly Bean 4.2.2 and Linux 4.1.

5.1 Operating camera on Android


1. Download the latest Recovery Image from Variscite ftp site.
2. Follow VAR-DVK-MX6 Quick Start Guide document and burn Android file system into VAR-SOM-MX6 module from the Recovery Image.
3. Restart the board – Android file system will start

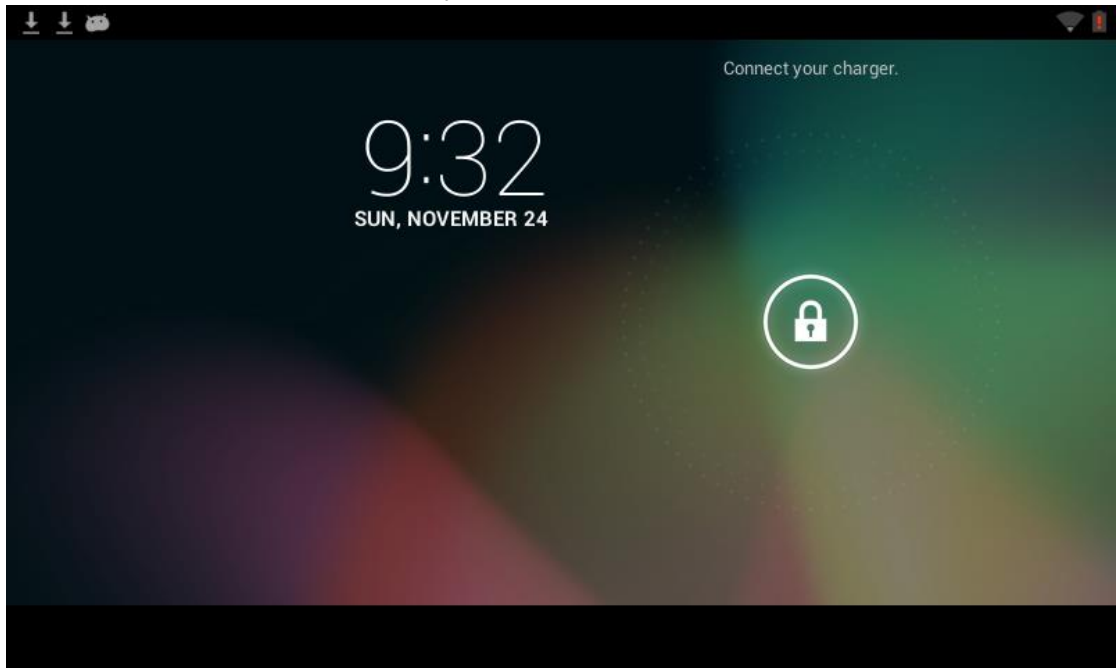

4. Unlock the screen by dragging the lock sign to the upper side of the screen

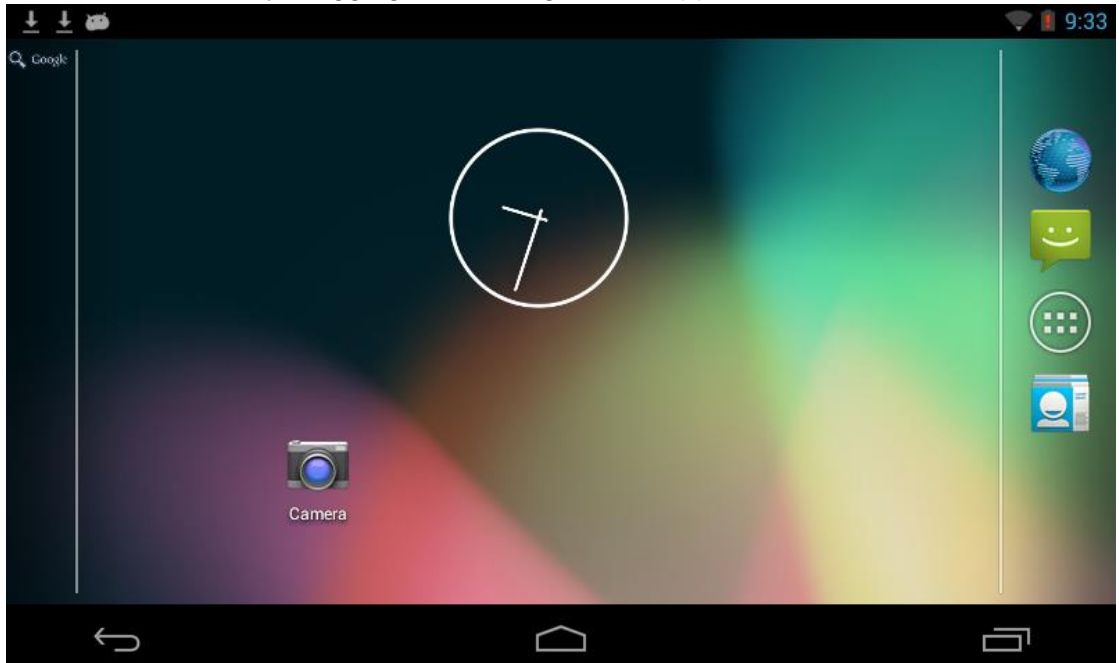

5. Press the menu icon (3rd from the top on the right bar). The Main menu will show.

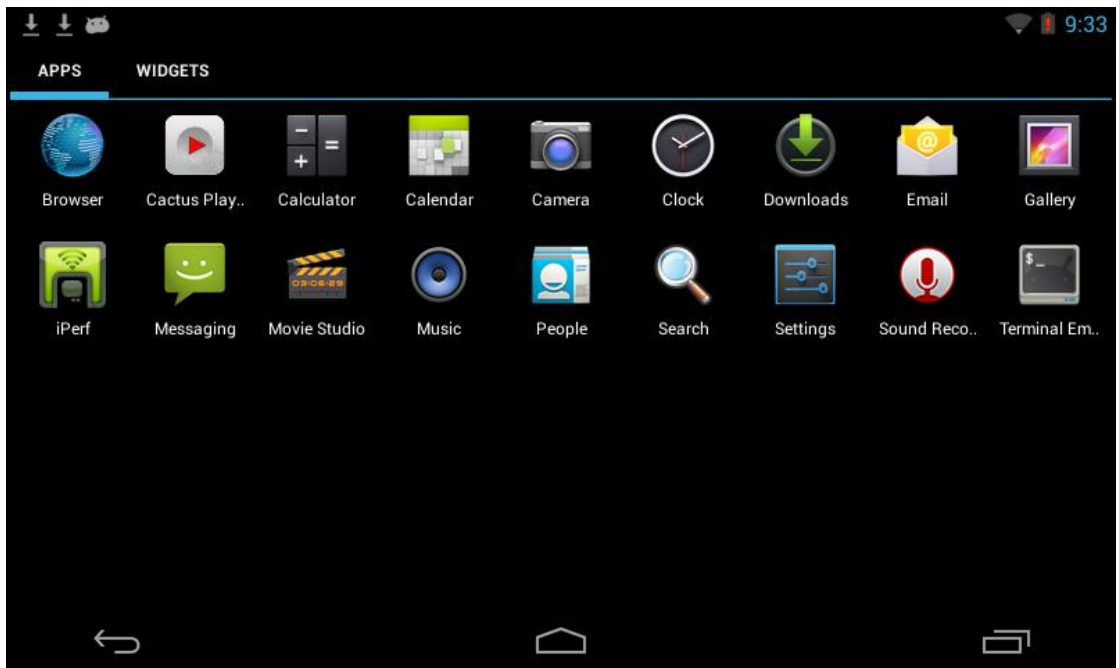

6. Open the Camera application by pressing the 5th icon. The preview window should appear on the screen.



7. You can press the Record button to start record or switch to the stills mode by pressing camera button in the right lower corner of the screen.
8. You can view the recordings and the still images taken by using Gallery application.

5.2 Viewing camera on Linux

1. Download the latest Recovery Image from Variscite ftp site.
2. Follow VAR-DVK-MX6 Quick Start Guide document and burn Yocto file system into VAR-SOM-MX6 module from the Recovery Image.
Note: LTIB file system is deprecated so burn default file system will write Yocto Linux to NAND memory.
3. Reset the board. The Yocto Linux will boot up.



4. Open serial console on the PC and connect to the EVK board.
5. Login as root and enter the following commands:
 - a. `modprobe ov5642_camera`
Load the camera driver
 - b. `modprobe mxc_v4l2_capture`
Load the capture driver
 - c. `/etc/rc5.d/S01xserver-nodm stop`
Close the running xserver (the screen will go black)
 - d. `gst-launch mfw_v4lsrc ! mfw_v4lsink`
Start preview

6. You will see the preview on the screen.



6 Legal Notice

Variscite Ltd. (“Variscite”) products and services are sold subject to Variscite terms and conditions of sale, delivery and payment supplied at the time of order acknowledgement.

Variscite warrants performance of its products to the specifications in effect at the date of shipment. Variscite reserves the right to make changes to its products and specifications or to discontinue any product or service without notice. Customers should therefore obtain the latest version of relevant product information from Variscite to verify that their reference is current.

Testing and other quality control techniques are utilized to the extent that Variscite deems necessary to support its warranty.

Specific testing of all parameters of each device is not necessarily performed unless required by law or regulation.

In order to minimize risks associated with customer applications, the customer must use adequate design and operating safeguards to minimize inherent or procedural hazards. Variscite is not liable for applications assistance or customer product design. The customer is solely responsible for its selection and use of Variscite products. Variscite is not liable for such selection or use or for use of any circuitry other than circuitry entirely embodied in a Variscite product.

Variscite products are not intended for use in life support systems, appliances, nuclear systems or systems where malfunction can reasonably be expected to result in personal injury, death or severe property or environmental damage. Any use of products by the customer for such purposes is at the customer’s own risk.

Variscite does not grant any license (express or implied) under any patent right, copyright, mask work right or other intellectual property right of Variscite covering or relating to any combination, machine, or process in which its products or services might be or are used. Any provision or publication of any third party’s products or services does not constitute Variscite’s approval, license, warranty or endorsement thereof. Any third party trademarks contained in this document belong to the respective third party owner.

Reproduction of information from Variscite datasheets is permissible only if reproduction is without alteration and is accompanied by all associated copyright, proprietary and other notices (including this notice) and conditions. Variscite is not liable for any un-authorized alteration of such information or for any reliance placed thereon.

Any representations made, warranties given, and/or liabilities accepted by any person which differ from those contained in this datasheet or in Variscite standard terms and conditions of sale, delivery and payment are made, given and/or accepted at that person’s own risk. Variscite is not liable for any such representations, warranties or liabilities or for any reliance placed thereon by any person.

7 Warranty Terms

Warranty Terms

Variscite guarantees hardware products against defects in workmanship and material for a period of one (1) year from the date of shipment. Your sole remedy and Variscite's sole liability shall be for Variscite, at its sole discretion, to either repair or replace the defective hardware product at no charge or to refund the purchase price. Shipment costs in both directions are the responsibility of the customer. This warranty is void if the hardware product has been altered or damaged by accident, misuse or abuse.

Disclaimer of Warranty

THIS WARRANTY IS MADE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESSED, OR IMPLIED, OF MERCHANTABILITY, FITNESS FOR A SPECIFIC PURPOSE, NON-INFRINGEMENT OR THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION, EXCEPT THE WARRANTY EXPRESSLY STATED HEREIN. THE REMEDIES SET FORTH HEREIN SHALL BE THE SOLE AND EXCLUSIVE REMEDIES OF ANY PURCHASER WITH RESPECT TO ANY DEFECTIVE PRODUCT.

Limitation on Liability

UNDER NO CIRCUMSTANCES SHALL VARISCITE BE LIABLE FOR ANY LOSS, DAMAGE OR EXPENSE SUFFERED OR INCURRED WITH RESPECT TO ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL VARISCITE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES THAT YOU MAY SUFFER DIRECTLY OR INDIRECTLY FROM USE OF ANY PRODUCT. BY ORDERING THE SOM, THE CUSTOMER APPROVES THAT THE VARISCITE SOM, HARDWARE AND SOFTWARE, WAS THOROUGHLY TESTED AND HAS MET THE CUSTOMER'S REQUIREMENTS AND SPECIFICATIONS.

8 Contact Information

Headquarters:

Variscite Ltd.

9 Hamelacha St.
Lod 70100
POB 1121
Israel

Tel: +972 (9) 9562910
Fax: +972 (9) 9589477

Sales: sales@variscite.com

Technical Support: support@variscite.com

Corporate Website: www.variscite.com

